

## **DEMASLED**

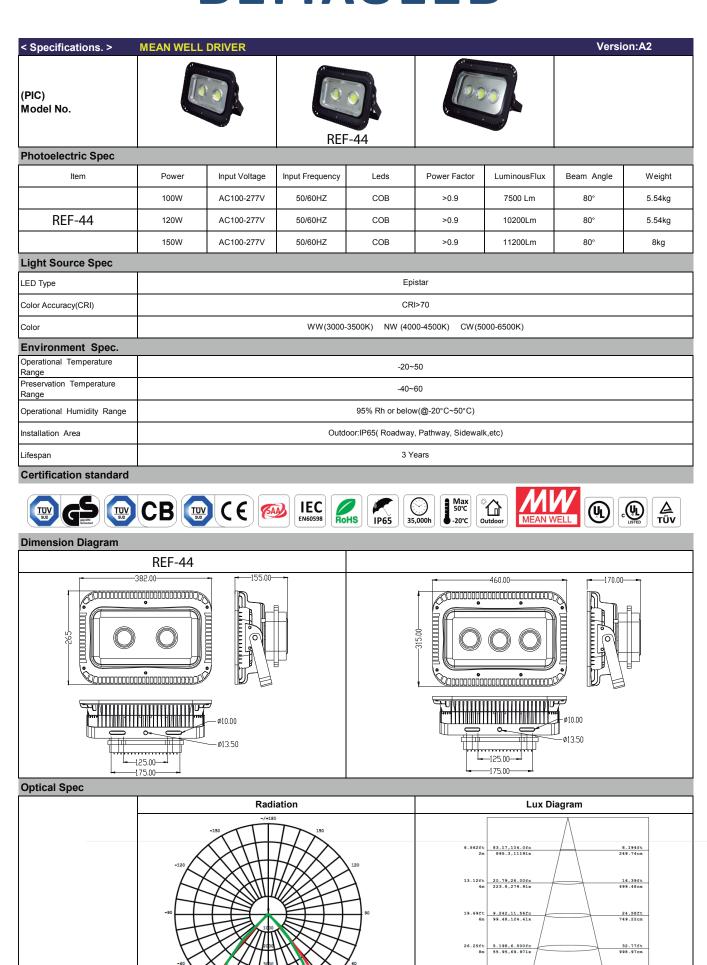

3.327,4.160fc 35.81,44.781


Reight Eavg, Emax Angle:63.96deg Diameter
Note:The Curves indicate the illuminated area and the average
illumination when the luminaire is at different distance

## DEMASLED

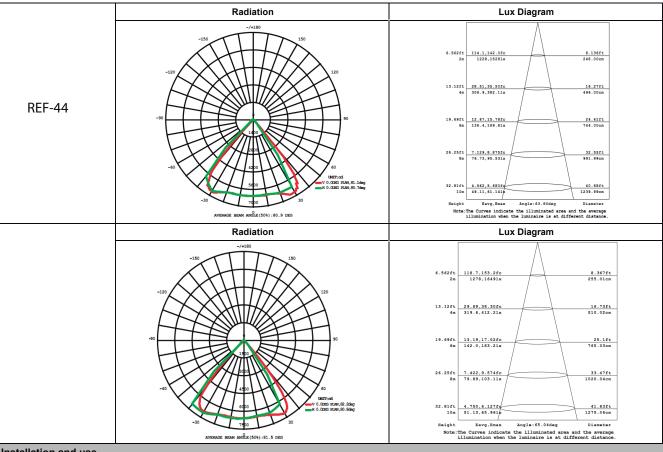


### Installation and use

1. First, adujust the angle you need, finally fasten the floodlights with screws

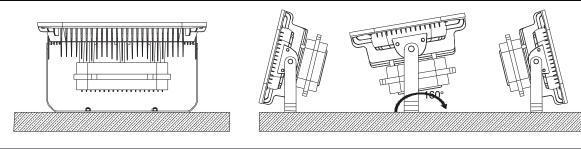

2. Connect the power wire from the Main lineto the power wire of the lamp, and then make treatment for water reistance. Pls note that the Brown color wire is Live wire, Blue wire is Null line, the yellow and green wire is Earth line.

3. Turn on the power supply to ensuer the light is working, Installed.

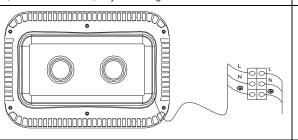


- 1.Please turn off the power supply befor installation or changing assembly parts.
- 2. The input voltage and the lamp should be adapted. After connecting the power line, please make sure the wiring section is insulated.
- 3. Non-professionals, must not install or dismantle the lamps.
- 4.All the lights during installation and in use should not be put with glass cover vertically upside.

Packing Spec						
ltem	Вох			Carton		
	Measurement mm!	Gross weight	Pcs/box	Measurement(mm)	Gross weight	Pcs/carton
	L395*W275*H195	6.34 kg	1	L420*W300*H430	14.1 kg	2
REF-44	L395*W275*H195	6.34 kg	1	L420*W300*H430	14.1 kg	2
	L520*W330*H230	8.84 kg	1	L545*W355*H260	10.15 kg	1

# **DEMASLED**

### Remarks"

- 1.White light series: WW (3000-3500K) NW (4000-4500K) CW (5000-6500K)
- 2.Luminous flux tolerance for ±10%
- 3.Products shall be subject to any changes without prior notices.

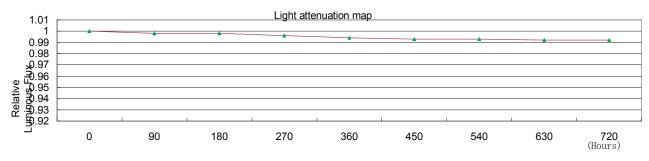

Through the 720H accelerated aging test,high and low temperature prediction in the rated under the working conditions after 35000H,will provide an average 70% optic maintenance ratio(L70).